



**PRODUCT CATALOGUE** 

January 2023

Craftsmanship

inflooring

### **About**

Sawyer's Fine Flooring Ltd. is Manitoba's largest manufacturer of custom flooring items such as custom vent covers, stair nosings and transitions.

Established in 2017, and currently operating in a new 5,500 sq. ft. plant, we have taken pride in delivering products of top craftsmanship and providing outstanding customer service.

In addition to serving customers throughout the province, Sawyer's has shipped its products to other Canadian Provinces and exported them to the United States.

Our custom vent covers and stair nosings are manufactured from the customers' flooring materials for a perfect match with the flooring of their choice. Some of our products are developed and made exclusively by Sawyer's.

We use advanced CNC equipment and high-quality materials to seamlessly match vent covers and stair nosings for even the most complex flooring projects. The products are hand crafted and finished to perfection every time.

We continuously expand the range of products, innovate and improve to finetune our production to meet and exceed our customers' expectations.

We look forward to working with you on all of your flooring projects!



# **Contents**

4	- 1	A			
Ί.	. 1	N	L	U	טי

1.1. Wood Vent Covers	
1.1.1. Flush-mounted, frameless	5
1.1.2. Flush-mounted, framed	6
1.1.3. Self Rimming Vent Covers	7
1.1.4. Wall-mounted Vent Covers and Kick Plate Vents	8
1.1.5. Special Vent Covers	9
1.2. Flush-mounted Wood Stair Nosings and Stringer Caps	
1.2.1. Bull Nose (Type 1)	10
1.2.2. Ready Step (Type 2), Stringer Caps	11
1.3. Overlap Wood Stair Nosings	12
1.4. Solid Wood Treads and Risers	13
1.5. Wood Transitions	14

### 2. LAMINATE

<b>4</b> . i.	Lammate vent covers	
	2.1.1. Flush-mounted, frameless	15
	2.1.2. Flush-mounted, framed	16
2.2.	Flush-mounted Laminate Stair Nosings, Stringer Caps	
	2.2.1. Bull Nose (Type 1)	17
	2.2.2. Ready Step (Type 2), Stringer Caps	18
2.3.	Overlap Laminate Stair Nosings	19
<u> 2.4.</u>	Laminate Transitions	20

Continued

### Continued

### 3. VINYL


3.2.	. Click & Glued Vinyl	
	3.2.1. Flush-mounted reinforced Vent Covers with Dampers	21
	3.2.2. Flush-mounted Stair Nosings	22
	3.2.3. Stringer Caps	23
	3.2.4. Transitions	24
3.1.	. Click Vinyl Only	
	3.1.1. Flush-mounted unreinforced vent covers	25
	3.1.2. Overlap Stair Nosings (1 of 2)	26
	3.1.3. Overlap Stair Nosings (2 of 2)	27

	-1 71			וחו		re.
4. Kt	ELAI	ED I	PRO	JUL	JU	3

4.1. Vent Cover Dampers	28
4.2. Installation Templates	
4.2.1. Inside Templates	29
4.2.2. Outside Templates	30


### **Flush-mounted Frameless Vent Covers**

# Wood

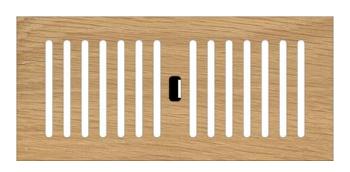

Duct Size	SKU to order		
	No Damper	Damper Included	
3" x 10"	WC310	WC310D	
3" x 12"	WC312	WC312D	
4" x 10"	WC410	WC410D	
4" x 12"	WC412	WC412D	


Back to menu

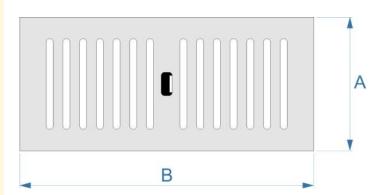

Duct Size	Α	В
3" x 10"	4"	11"
3" x 12"	4"	13"
4" x 10"	5"	11"
4" x 12"	5"	13"

### WC410D




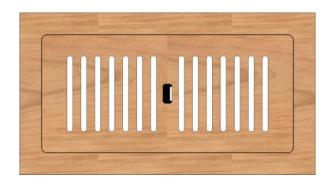





**WC310FD** 

	No Damper	Damper included
Duct Size	SKU to order	
3" x 10"	WC310F	WC310FD
3" x 12"	WC312F	WC312FD
4" x 10"	WC410F	WC410FD
4" x 12"	WC412F	WC412FD

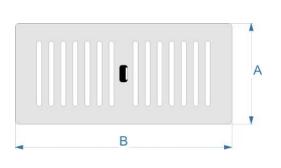

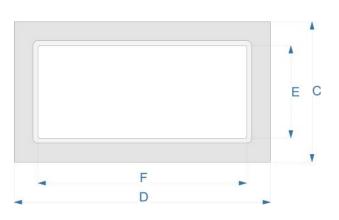



Duct Size	Α"	В"	C"	D"	Ε"	F"
3" x 10"	4-1/4	11-1/4	6-1/4	13-1/4	3-3/4	10-3/4
3" x 12"	4-1/4	13-1/4	6-1/4	15-1/4	3-3/4	12-3/4
4" x 10"	5-1/4	11-1/4	7-1/4	13-1/4	4-3/4	10-3/4
4" x 12"	5-1/4	13-1/4	7-1/4	15-1/4	4-3/4	12-3/4

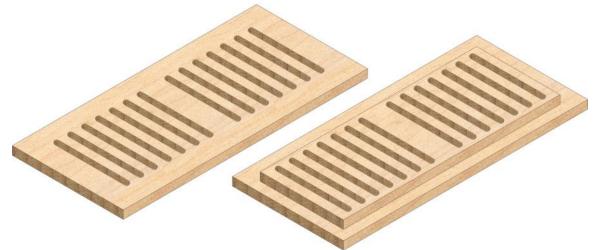

	No Damper	Damper included	
Duct Size	SKU to order		
3" x 10"	WC310S	WC310SD	
3" x 12"	WC312S	WC312SD	
4" x 10"	WC410S	WC410SD	
4" x 12"	WC412S	WC412SD	



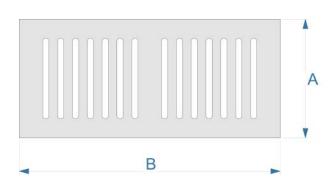

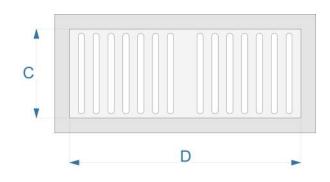


Duct Size	Α	В	С	D
3" x 10"	4"	11"	2-3/4"	9-3/4"
3" x 12"	4"	13"	2-3/4"	11-3/4"
4" x 10"	5"	11"	3-3/4"	9-3/4"
4" x 12"	5"	13"	3-3/4"	11-3/4"



**Wall-mounted Vent Covers** of required size, shape and slot design.

Vent Size	SKU to order
8" x 16"	WWC816
Custom x Custom	<b>WWC</b> [Width x Length]

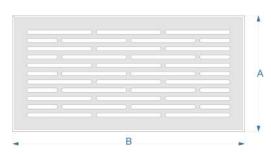

A = custom

B = custom

### **Kick Plate Vents**



**Vent** slots of any shape, size or design can be cut in Kick Plate boards. Or, self rimming (flanged) vent covers can be made for existing openings.




Kick Plate Vents

SKU to order

Custom size

KPV

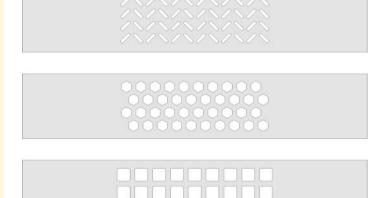



### **Special Vent Covers** include

- Oversized Vent Covers
- Vent Covers with large or special shape slots
- Vent Covers made from Sawyer's raw material
- Other custom designs


















# **Bull Nose Stair Nosing (Type 1 nosing),**

## **Flush-mounted**



SKU to order Nosing application Does not wrap tread WN1 Does not wrap tread, unfinished bottom WN1B Wraps tread WN1A



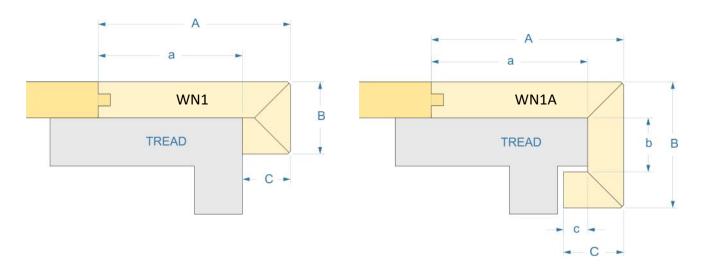



WN1 Dimensions			
А	В	С	Nosing Length
4" or custom, up to plank width	1-1/2" or custom, up to 4"	1" or custom, up to 2"	Up to 12 ft

# **Ready Step Flush-mounted Nosings (Type 2)**

# Wood


# **Stringer Caps**

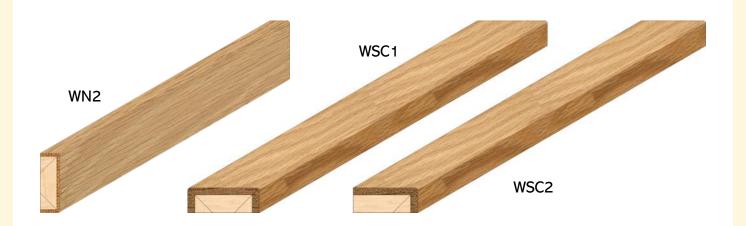

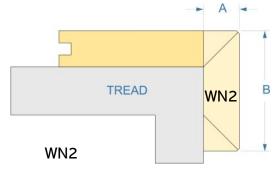

Product	Туре	SKU to order
Nosing	Ready Step	WN2
Stringer Cons	Detached from wall	WSC1
Stringer Caps	Attached to wall	WSC2


A = material thicknessB = 2-1/2" or custom

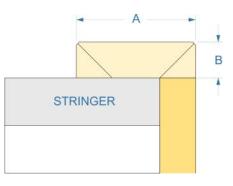

WSC<sub>1</sub>

A = custom

B = material thickness

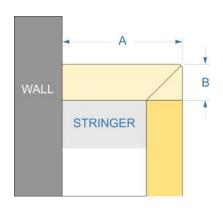

WSC2

A = custom


B = material thickness



# **Overlap Stair Nosings**

# Wood



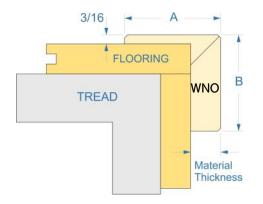


A = 2" or custom

B = 2" or custom

SKU to order
WNO





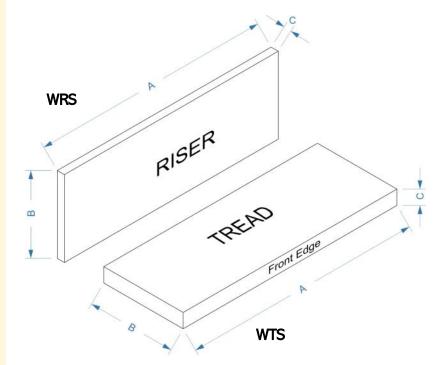



Product	Thickness	SKU
Wood Riser, Veneer	1/16"	WRV
Wood Riser, Solid Plank	1/4"	WRS
Wood Tread, Solid Plank	3/4"	WTS





### **Use Wood Transitions Form for all wood transitions**

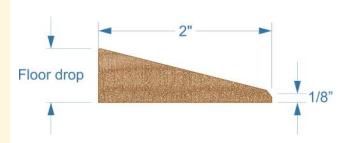

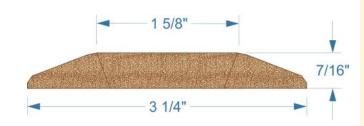

WR Reducer, flush

WTH Threshold




Material thickness

5/8"

WIC Inside Corner


WTM3 T-mould 3, uneven

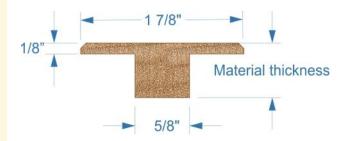

1 1/2"

WTM1 T-mould 1, wide

1/8"

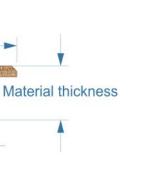


WTM2 T-mould 2, narrow



### **Flush-mounted Frameless Vent Covers**


# Laminate

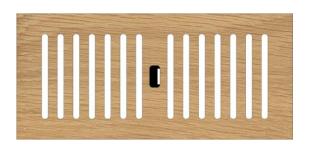




LC310D

	SKU to order	
Duct Size	No Damper	Damper Included
3" x 10"	LC310	LC310D
3" x 12"	LC312	LC312D
4" x 10"	LC410	LC410D
4" x 12"	LC412	LC412D

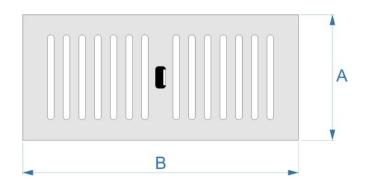


Duct Size	А	В
3" x 10"	4"	11"
3" x 12"	4"	13"
4" x 10"	5"	11"
4" x 12"	5"	13"


# Laminate

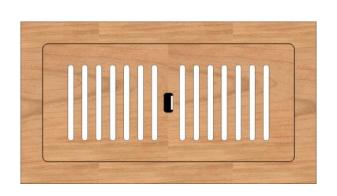



	No Damper	Damper included
Duct Size	SKL	J to order
3" x 10"	LC310F	LC310FD
3" x 12"	LC312F	LC312FD
4" x 10"	LC410F	LC410FD
4" x 12"	LC412F	LC412FD

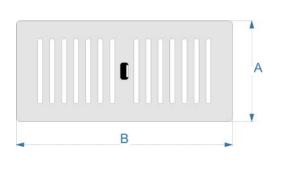

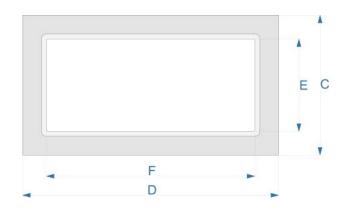

Duct Size	Α"	В"	C"	D"	E"	F"
3" x 10"	4-1/4	11-1/4	6-1/4	13-1/4	3-3/4	10-3/4
3" x 12"	4-1/4	13-1/4	6-1/4	15-1/4	3-3/4	12-3/4
4" x 10"	5-1/4	11-1/4	7-1/4	13-1/4	4-3/4	10-3/4
4" x 12"	5-1/4	13-1/4	7-1/4	15-1/4	4-3/4	12-3/4

# Laminate

# Bull Nose Stair Nosing, (Type 1 nosing),


### Flush-mounted



Nosing Type	SKU to order
Does not wrap tread	LN1
Does not wrap tread, unfinished bottom	LN1B
Wraps tread	LN1A



Back to menu

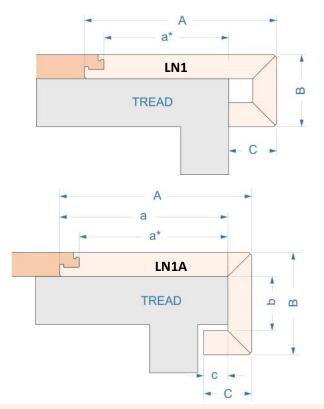


A = 4" or custom, up to plank width
B = 1-1/2" or custom
C = 1" or custom
Nosing length—up to 12 ft


A = 4" or custom, up to plank width b = tread thickness plus 1/8" C = 7/8" or custom Nosing length—up to 12 ft

# **Ready Step Flush-mounted Nosings (Type 2)**


# Laminate

# **Stringer Caps**

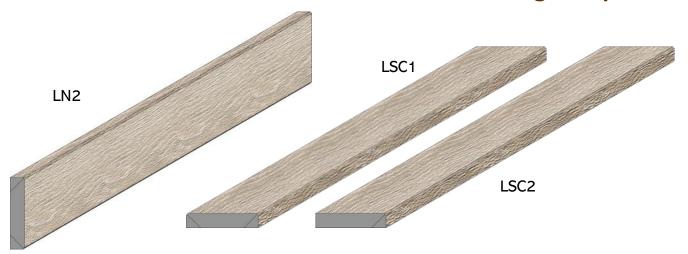

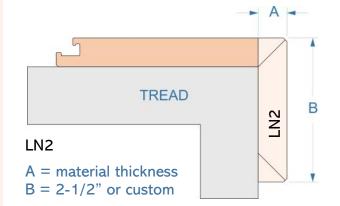


Product	SKU to order
Nosing	LN2
Stringer Cap, detached from wall	LSC1
Stringer Cap, attached to wall	LSC2

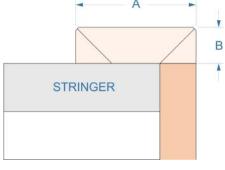

LSC1

A = custom

B = material thickness

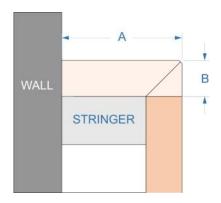

LSC2

A = custom

B = material thickness


# **Stair Nosings, Overlap**

# Laminate



SKU to order LNO

Back to menu

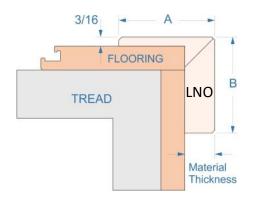


A = 2" or custom
B = 2" or custom
Nosing length—up to 12 ft




# **Laminate**

### **Use Laminate Transitions Form for all laminate transitions**

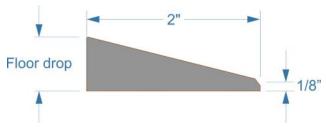


LR Reducer, flush

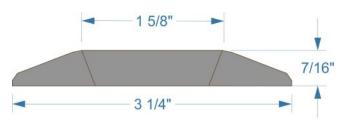


LTH Threshold




LIC Inside Corner




**LRC** Riser Cap

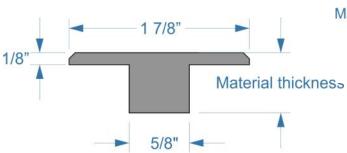


LTM1 T-mould 1, wide

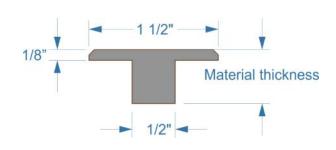

LTM2 T-mould 2, narrow

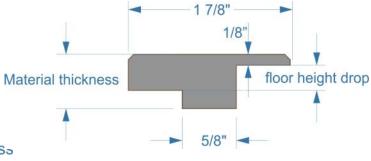

LTM3 T-mould 3, uneven

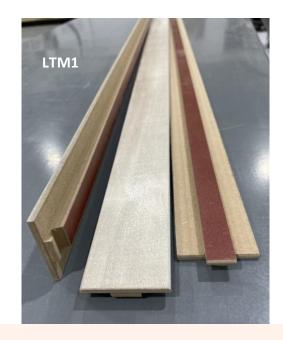

# Flush-mounted Reinforced Vent Covers with Dampers


# Click Vinyl Glued Vinyl



Duct Size	SKU to order
Duct Size	Metal-reinforced, with Damper
3" x 10"	VC310MD
3" x 12"	VC312MD
4" x 10"	VC410MD
4" x 12"	VC412MD

Back to menu

### Vent Cover & Installation Shims

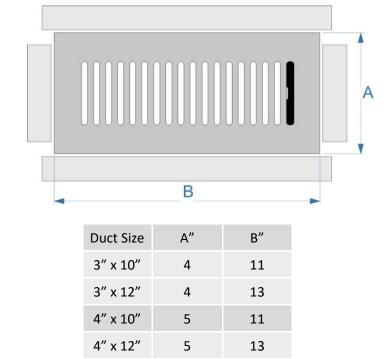



# **Flush-mounted Nosings**

# Click Vinyl

# **Glued Vinyl**



**VNC** 


VND


Back to menu




Reinforced nosing (bull nose)

Reinforced nosing (ready step)

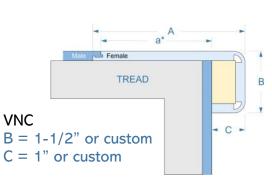

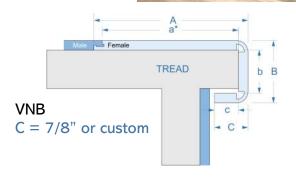

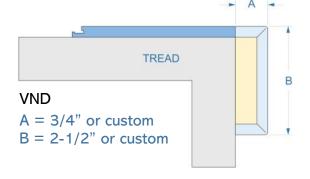


# **Stringer Caps**

# Click Vinyl Glued Vinyl



Product	SKU to order
Stringer Cap, detached from wall	VSC1
Stringer Cap, attached to wall	VSC2

Back to menu

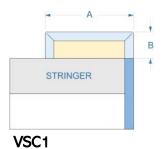

A = custom
B = material thickness

WALL B
STRINGER


A = custom
B = material thickness



### **Transitions**


### **Use Vinyl Transitions Form for all vinyl transitions**

# Click Vinyl Glued Vinyl

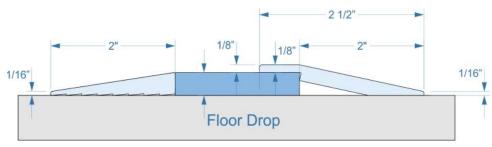


VR Flush Reducer

VRO Overlap Reducer (click only)

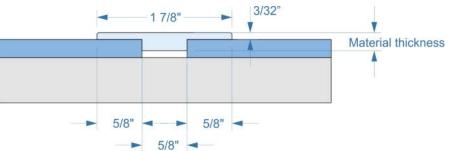


VTM1 T-mould 1, wide

Back to menu

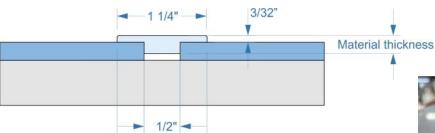

VTM2 T-mould 2, narrow

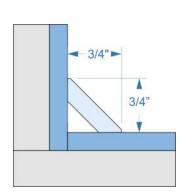

> 3/8"
> 3/8"


VIC Inside Corner






# Flush-mounted Unreinforced Vent Covers Without Dampers


# **Click Vinyl**

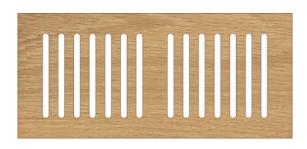


Duct Size	SKU to order
3" x 10"	VC310
3" x 12"	VC312
4" x 10"	VC410
4" x 12"	VC412

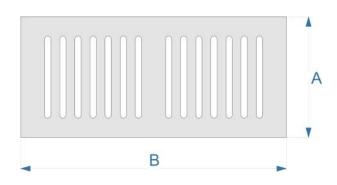

Duct Size	Α	В
3" x 10"	4"	11"
3" x 12"	4"	13"
4" x 10"	5"	11"
4" x 12"	5"	13"

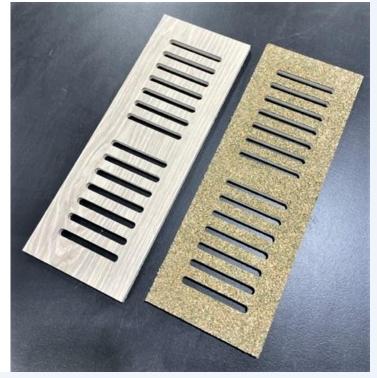



# **Click Vinyl**

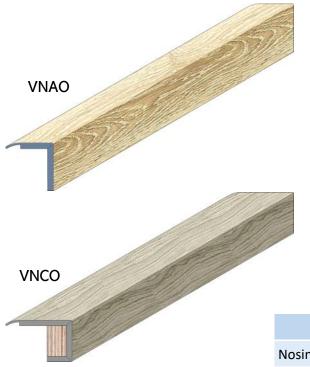




Vinyl Nosing Type	SKU to order	
Nosing does not wrap tread (L-shaped)	VNAO	
Nosing wraps tread (J-shaped)	VNBO	
Reinforced nosing (bull nose)	VNCO	

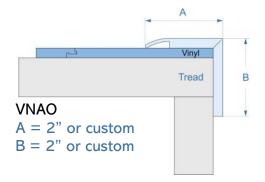

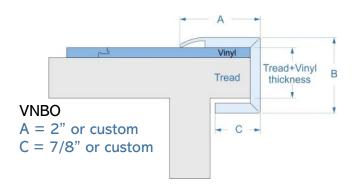

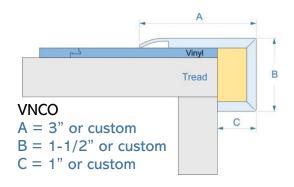




# Stair Nosings, Overlap (2 of 2)


# **Click Vinyl**





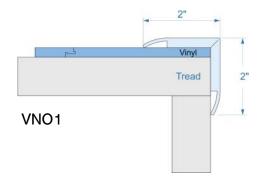

Vinyl Nosing Type	SKU to order	
Even Overlap nosing, wide	VNO1	
Even Overlap nosing, narrow	VNO2	

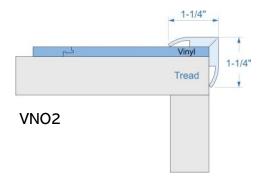



# Back to

menu

### Related Products (1 of 3)

### **Vent Cover Dampers for all types of wood and laminate vent covers**

Steel dampers can be added to previously made wood and laminate Sawyer's vent covers.

The dampers are made from 20 ga powder coated steel.


### D3101C

Damper for 3"x10" vent cover




### D4101C

Damper for 4"x10" vent cover

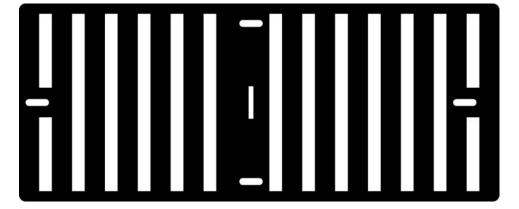

### D4121C

Damper for 4"x10" vent cover

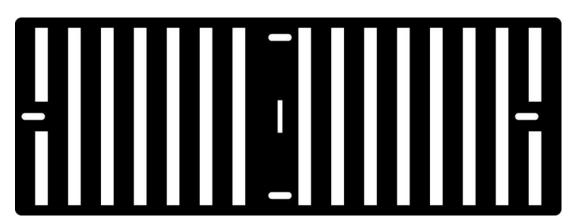

### Back to menu

### **Related Products (2 of 3)**

### **Vent Cover Installation Templates for all types of vent covers**

Inside templates replicate the outside measurements of Sawyer's vent covers. They can be used to make cut-outs in flooring in preparation for installation of vent covers.

The templates are made of 12 mm (1/2") Baltic birch plywood.



T310l
Installation Template for
3"x10" frameless vent cover



T410l
Installation Template for
4"x10" frameless vent cover



T412l
Installation Template for
4"x12" frameless vent cover



Installation Template for 3"x10" framed vent cover





Installation Template for 4"x10" framed vent cover






T412FI

Installation Template for 4"x12" framed vent cover

# Related Products (3 of 3)

# Vent Cover Routing Installation Templates for all types of Sawyer's vent covers

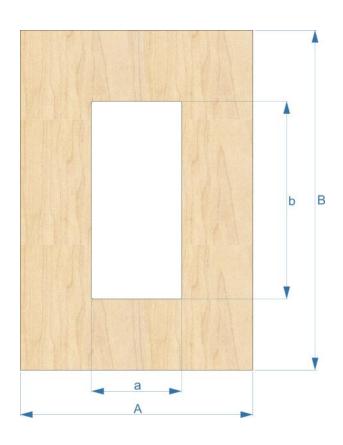



Routing Templates	SKU to order	Α,"	В,"	a,"	b,"
Routing Installation Template	T310R	12	19	4.040	11.040
Routing Installation Template	T410R	13	19	5.040	11.040
Routing Installation Template	T412R	13	21	5.040	13.040
Routing Installation Template	T310FR	14	21	6.290	13.290
Routing Installation Template	T410FR	15	21	7.290	13.290
Routing Installation Template	T412FR	15	23	7.290	15.290

# FLOORING



2-329 Parkdale Road, St. Andrews, Manitoba Canada R1A 3N9

Cell: 204-509-6186

Office: 204-339-2824

borissawyer@shaw.ca

www.sawyerswood.com

@realsawyerswood

Back to Pg 1