




Use Wood Transitions Form to order wood transitions

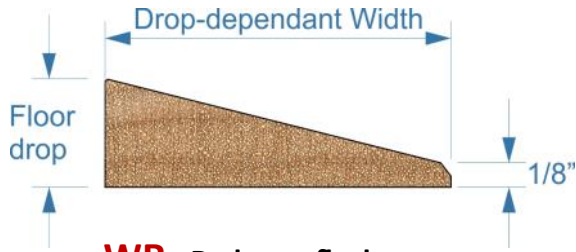


WR Reducer, flush

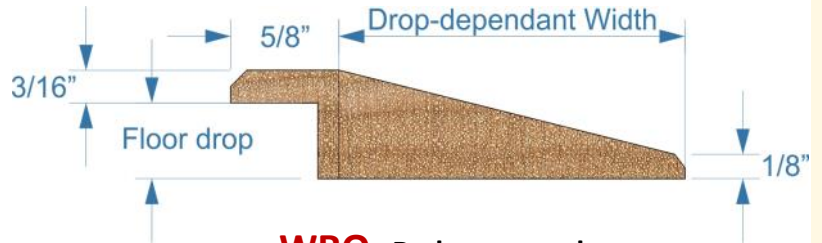


WRO Reducer, overlap

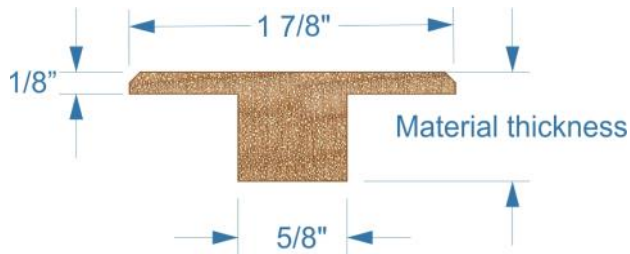

WTML T-mould, large

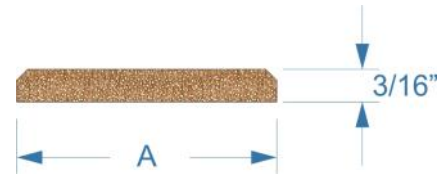


WEC End Cap

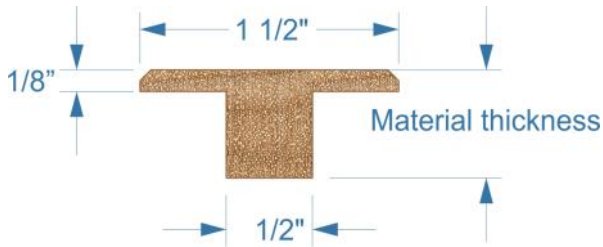

WTMS T-mould, small



WIC Inside Corner

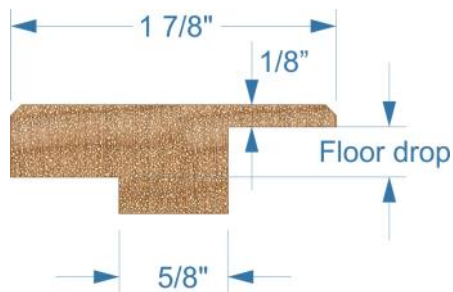

WTMU T-mould, uneven



WTH Threshold